



TRANSPORT WINCH ASSEMBLIES – SLIDE ON

REF: AW108-1

- Single or Double Ended.
- Facing winch on track, gear mechanism must be on left hand side.
- Use only recommended designed winch bars.


Basic Steps of Operation

To Tie Down:

1. Rotate handle to disengage latch mechanism on side and hold lever up while pulling out strap. (Caution: Keep fingers clear of rotating gear.)
2. Secure hook on opposite side of vehicle.
3. Manually wind up winch handle until tight.
4. Tension winch by using winch bar until the desired tension is achieved. (Do not over tighten as you may damage the object you are tying down.)

To Release:

1. Use winch bar to slightly increase tension sufficient enough to disengage latch mechanism on side.
2. Hold lever up while releasing tension off strap. (Caution: Keep fingers clear of rotating gear.)
3. Remove hook from opposite side of vehicle.
4. Manually wind up winch handle until the entire strap is tight on drum and engage latch to secure strap from accidentally releasing.

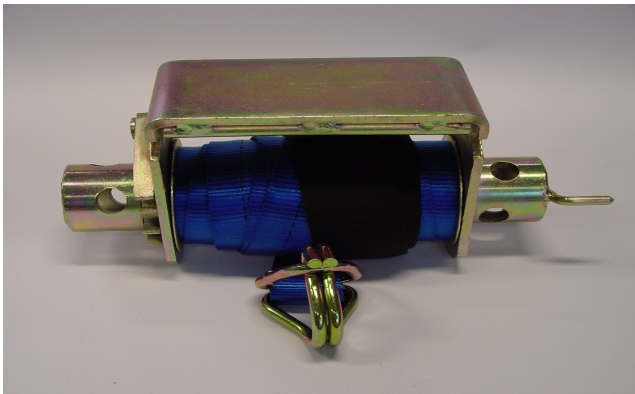

- Maintain minimum of 3-5 layers of webbing overlapping on winch drum at all times.
- Ensure Strap is securely tight and hook connected when not in use.
- To be used as a guide only.
- Other Reference Document AW116 Use and Care Instructions.

MANUFACTURED BY ATALS WHOLEALE PTY LTD. ABN 52 002 950 370. www.juststraps.com.au